
—— Cambridge Aero Instruments —— 301/302 Operator's Card

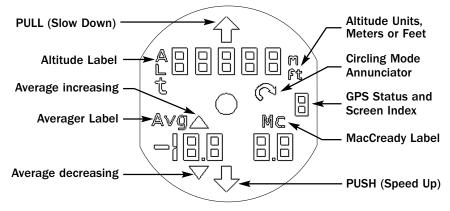

THE HOME SCREEN

- See Altitude, Average Lift, Average Trend, MacCready Setting
- Turn knob to change audio volume

SCREEN #1 Set MacCready

- Turn knob to change MacCready setting

SCREEN #2 Set Altimeter

- Upper digits → Altimeter Reading
- Lower 5 digits → Sea level Barometric Pressure (mBar or "Hg.)
- Turn knob to adjust barometric pressure & Altimeter reading

SCREEN #3 Power Supply Voltages

- Top line shows glider battery voltage.
- Bottom line shows SUPP.1
- Turn knob for 5UPP.2, the auxiliary battery (OK > 9.2 V; Off < 7.2 V)

SCREEN #4 Audio response time — Rud 10

- Number is 67% of full scale time in seconds
- Turn knob to change audio vario response time

SCREEN #5 Vario pointer response time — Po i.

- Number is 67% of full scale time in seconds
- Turn knob to change vario pointer response time

—— Additional Screens —

#6: Alternative Altimeters

- If configured for Altitude in meters: Same as Home Screen but Alt. in ft.
- Turn knob to see Flight Level FL in ft. & meters, GPS Altitude 5 RL, & Pressure Altitude Pr AL in meters FL = Barograph Altitude at Std. Atm. Pr AL = Vario sensor at Std. Atm.
- If configured for Altitude in feet. Same as Home Screen but FL in ft.
- Turn knob to see 5 AL & Pr Al in ft.

#7 Ballast Percentage 684

- Shows water ballast (0-100%)

#8 Slow Alarm Threshold 510

- Shows speed (kts or km/hr) below which alarm sounds.

#9 TE compensation % E Red

 Shows % dynamic pressure subtracted from static air pressure.
(100% if electronic compensation, 0% if TE probe compensation)

#0 Sensor Readings

- See Manual for details

#11 Diagnostic Screens

- Turn knob to move the pointer
- All LCD segments show at POS ition 540

POWER-ON SCREENS

- The pointer moves at power-on to calibrate pointer zero
- Top line shows instrument serial number
- Bottom line shows Firmware Version
- After 10 seconds, Screen #2 is shown Set barometric pressure
- Double-tap the knob to see HOME Screen

INSTRUMENT CONTROL

- The knob can be pressed (tapped) or turned
- Tap to advance Screen Index #
- Double-Tap to see the HOME screen
- Tap to reset an alarm condition
- With optional Switched power:
 - Turn ON by tapping the knob
 - Turn OFF by holding knob in for 3 seconds

MEANING

SYMBOL

HOME SCREEN GPS STATUS INDICATOR (Center Right Digit)

GPS receiver not present (301) or broken (302)

☐ → GPS receiver OK, but no

- > Satellites found, but no GPS fix

 \rightarrow 3-D GPS Fix (GPS OK!)